



NOTES:

1. SURFACE MUST BE CLEAN, DRY AND IN SOUND CONDITION. REMOVE ALL OIL, GREASE, DUST, DIRT, LOOSE RUST AND OTHER FOREIGN MATERIAL TO ENSURE ADEQUATE ADHESION.
2. APPLY UNIFLEX RUST INHIBITIVE METAL PRIMER PRIOR TO REPAIRS AND COATING IF METAL SURFACE OXIDATION IS PRESENT
3. REFER TO APPROPRIATE UNIFLEX PREMIUM ELASTOMERIC SPECIFICATION.



UNIFLEX PREMIUM ELASTOMERIC SYSTEM

STANDING SEAM HORIZONTAL LAP DETAIL

DATE: 3/25/11

SHEET NO:

MT-S-2

NOT TO SCALE