


**APPLY UNIFLEX SEALANT
AT ALL CURB/DIVERTER
METAL OVERLAPS**

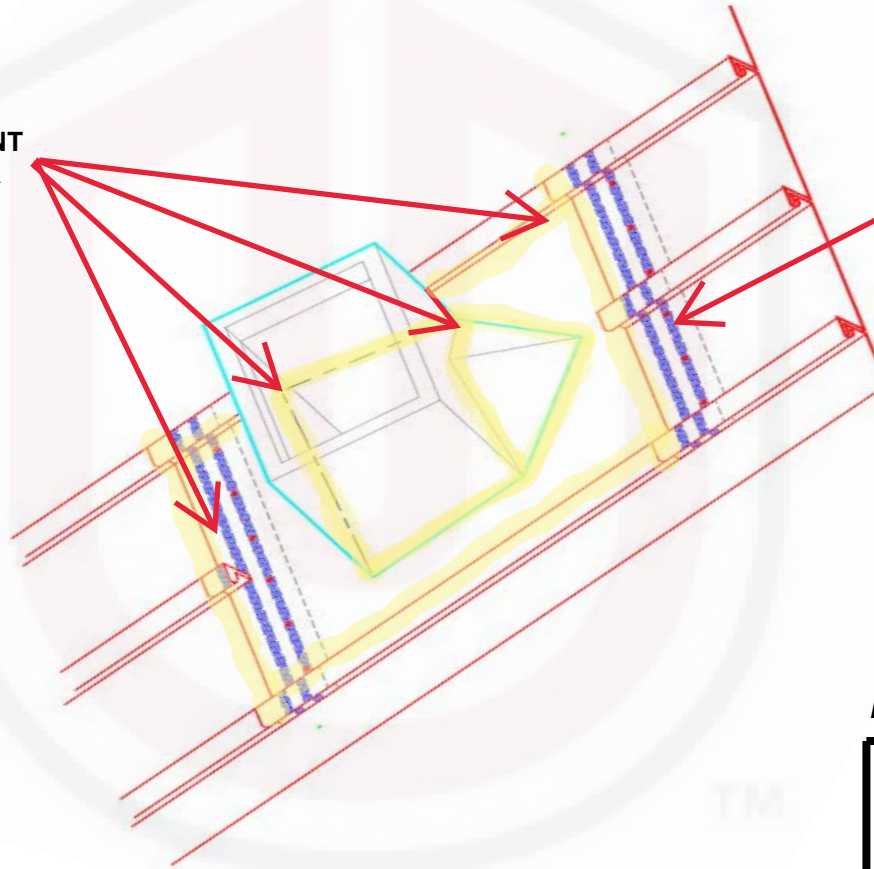

**METAL PANEL LAPS
WITH ORIGINAL
SEALANT**

Notes:

1. *Surface must be clean , dry and in sound condition prior to application.*
2. *Apply appropriate Uniflex Rust Inhibitive Primer prior to application if corrosion is present.*
3. *Refer to the Uniflex Specification for appropriate sealant or coating.*